


POST- HEATER

Installation instructions

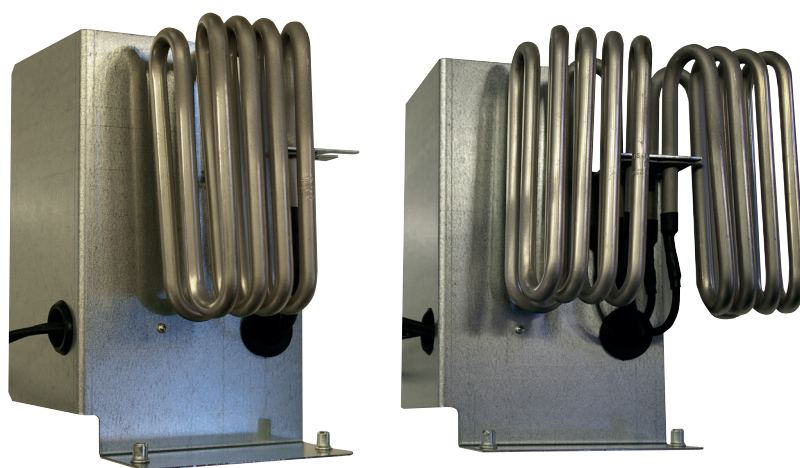

Post- Heater Kit

INSTALLATION



ATTENTION!





We recommend, that mounting is only done by a professional installer.

Mounting instructions for post-heater kit.

Adroit Mechanical Ventilation with Heat Recovery units can be equipped with an optional post-heater. Post-heater kits are available for both Left hand and Right hand model units.

The following are mounting instructions for a Right hand model. For left hand units, the images are mirrored.

1. Remove the unit from mains.
2. Open ventilation unit door.
3. Pull the G4 filter away (A).
4. Detach the upper support of the cell horizontally (B).
5. Lift the cell carefully so that it comes freely out of the unit (C).
6. Detach the temperature sensor and humidity sensor (D) and locking screw (E).
7. Pull the bypass duct off through the bottom (F).
8. Remove the temperature sensor from the air duct and detach the wing nuts (G).
9. Lift off the air control damper and mount the heater stand with heater in the same holes with wing nuts.
10. Connect the heater to the connector on the wall of the unit (H).
11. Assemble the parts back in the opposite order.
12. Connect the unit back to the mains.
13. Choose cell bypass as the defrosting mode from unit control panel.

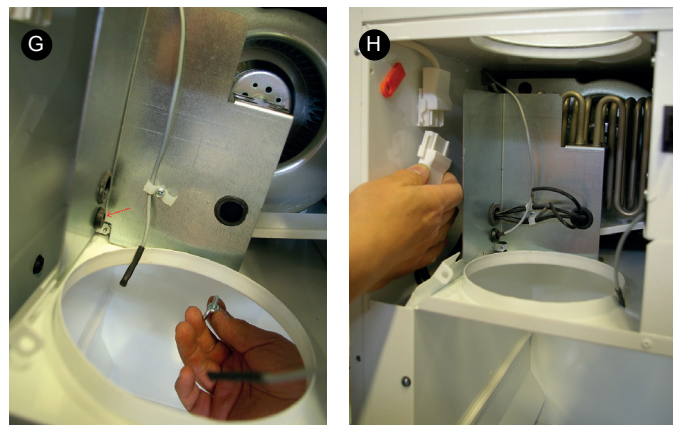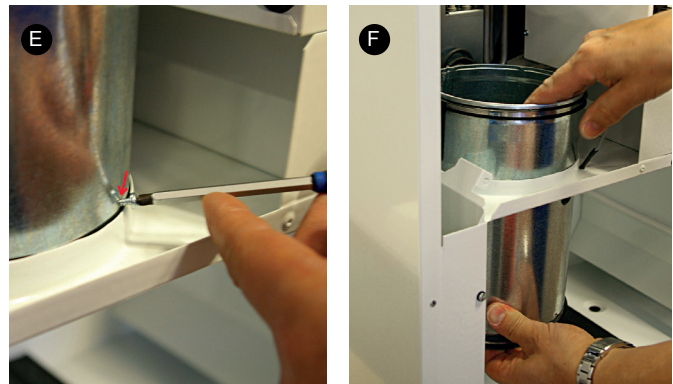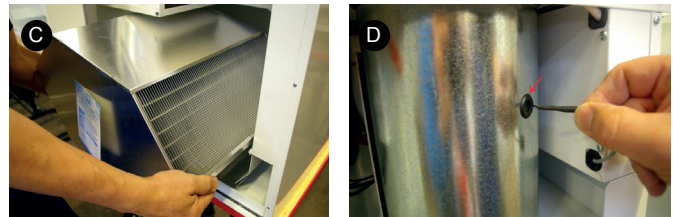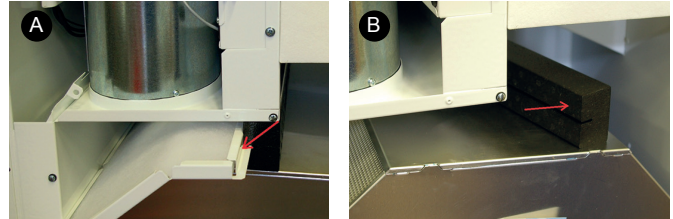

Part numbers

Post heater kit 900W for DV96 (R) Adroit	90000614
Post heater kit 900W for DV96 (L) Adroit	90000615
Post heater kit 900W for DV110 (R) Adroit	90000616
Post heater kit 900W for DV110 (L) Adroit	90000617
Post heater kit 900W + 1500W for DV145 (R) Adroit	90000624
Post heater kit 900W + 1500W for DV145 (L) Adroit	90000625