


OT CABLE CLAMP D-STYLE

OPTOTRONIC® OT CABLE CLAMP D-STYLE (strain relief) can be snapped onto the compact ECG and thus converts it into an ECG suitable for independent installation.



Benefits

- Comfort space for wire assembling
- Separate cable clamp on each side for separate access to primary and secondary side
- Only one screw per flap for easy and fast fixation of the cables
- Suitable for different cable types


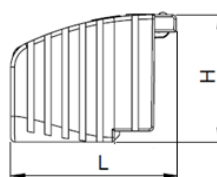


Cable Clamp D-style dimension

L	38,5mm
B	33,2mm
H	29,5 mm

Applications

Independent applications

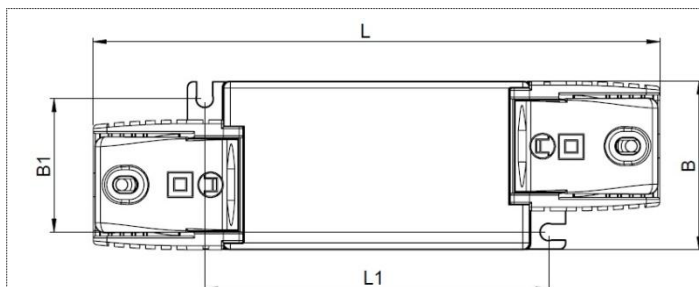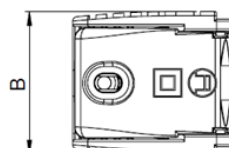

ECG with Cable Clamp D-style dimension


L	145mm
L1	88mm
B	43mm
B1	34mm
H	29,5 mm



Installation Method



1. Match cable clamp with corresponding ECG (refer to table "Matching ECG" for details).

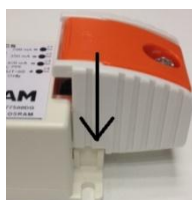

2. Snap cable clamp into ECG as shown for both sides.




3. Unscrew cover for wire installation. Tighten screw after wire installation.

	Item	Value	Unit	Remarks
Basic Data	Cable Jacket Diameter	3.55-9.65	mm	See cable below
	Weight	29±1	g	
Tested cable types (acc. EN60598-1):	H03VV-F 2x0,75			B position, see picture below
	H03VV-H2F 2x0,75			B position, see picture below
	H03VV-F 3x0,75			B position, see picture below
	H05VV-F 3x0,75			B position, see picture below
	H05VV-F 2x1			A & B position, see picture below
	H05VV-F 3x1			A & B position, see picture below
	H05VV-F 3x1,5			B position, see picture below
	NYM-J 3x1,5			A position, see picture below
	NYM-J 5x1,5			A & B position, see picture below
Matching ECG	Product name			Remarks
	OTE 25/220-240/420 CS			see ECG datasheet for details
	OTE 25/220-240/700 CS			



Product	EAN10	EAN10 content	Picture of content
OT CABLE CLAMP D-STYLE	4052899077904	2 physical pieces	

Product	EAN40	EAN40 content	Picture of content
OT CABLE CLAMP D-STYLE	4052899077911	40 physical pieces	20 x 

Manufacturer's address:**OSRAM GmbH**Steinerne Furt 62 D-86167 Augsburg
Germany**Technical support:**Kunden Service Center Germany
+49 (0)89-6213-60 00www.osram.com