

AIR-HANDLING UNITS DUPLEXBASE PS 650, 1100, 1700, 2300, 3500, 4500, 6000

Installation manual




Dear customer,

Thank you for choosing our product and we hope that you will be fully satisfied.

This manual contains all necessary instructions, information, hints and recommendations for safe and correct equipment installation and commissioning. Please read the manual carefully and follow the instructions contained herein.

Symbols explained

Items or sections marked with  (or with a grey background) apply only to appliances manufactured in compliance with the hygienic requirements of Regulation VDI 6022 (indicated on the identification plate, see following chapters).

Important notices

- **Electrical connections, commissioning and adjustment of the appliance may only be carried out by qualified electrical engineers.**
- **Before the installation and commissioning of the appliance carefully read the installation, use and maintenance manual, the controller operation manual and, where applicable, the service documentation.**
- **The appliance and all its accessories must be installed and used in compliance with the design, technical conditions specified by the manufacturer and applicable legislation and technical standards in effect.**
- **The appliance may not be installed and operated in an aggressive environment that could damage its external and internal mechanical parts.**
- **Before putting the appliance into permanent operation an initial inspection report on the appliance's power supply must be provided.**
- ⇒ **Before putting the appliance into operation an approval test (see VDI 2079 and DIN EN V 12599) of the entire HVAC system must be conducted. The test must include the examination of hygienic requirements as per VDI 6022 and must be documented appropriately. The user must be able to present the approval test report at any time. If the above requirements are not met, the manufacturer cannot ensure compliance with hygienic requirements.**

The manufacturer is not liable for damage caused by unprofessional installation and operation that is not in compliance with the operation and maintenance manual and general practices applied during installation and operation of HVAC equipment and control systems.

Contents

Contents	4
1. Safety instructions	5
1.1. General safety	5
1.2. Operational safety	5
2. Storage and transport	6
3. Description	7
3.1. General.....	7
3.2. Intended use.....	8
4. Installation	9
4.1. Safety instructions	9
4.2. Hygienic instructions and requirements.....	9
4.3. Configuring orientation of the unit.....	9
4.4. Identification of ports	11
4.5. Connecting the HVAC duct.....	11
4.6. Installation	12
4.6.1. Manipulation space	12
4.6.2. Inclination of the unit	13
4.7. Connecting the condensate drain pipe	15
4.8. Outdoor installation.....	17
4.9. Classification of air filters.....	17
4.10. Installing air filters.....	17
4.11. Installing, connecting and filling liquid manometers	18
4.12. Installing hot water heating coil	19
4.13. Installing mixing valve of hot water air heater	21
4.14. Installing shut-off dampers e1 (ODA), i1 (ETA)	21
4.15. Installing flexible flanges.....	21
4.16. Installing and connecting the water chiller to the cooling source	21
4.17. Installing the mixing valve of the water chiller.....	22
4.18. Installing direct chiller	22
4.19. Installing integrated electrical preheater	22
4.20. Installing external electrical preheater/heater EPO-V	22
4.21. Installing manometers to control constant flow and constant pressure	22
5. Electrical connection, commissioning	22
6. Access to the unit using the internet	23
7. Hygienic instructions for compliance with VDI 6022	23
7.1. General instructions.....	23
7.2. Required qualifications of personnel as per the type of activity	24
8. Package disposal, recycling	25
9. Repairs, spare parts	25
10. Warranty	25
11. Visual appendix - manuals	26
11.1. Connecting the condensate drain line	26
11.2. Fitting the filters	27

1. Safety instructions

1.1. General safety

- Only adults sufficiently familiar with the operation and maintenance manual may operate the equipment.
- The user must not tamper with or modify any part of the equipment, particularly the power supply wires!
- Only professional service technicians with relevant qualifications may perform equipment repairs. Unprofessional repairs are risky and may result in loss of warranty.
- Before opening the equipment's door for cleaning, filter replacement or general maintenance always make sure that the equipment is disconnected from the power supply and prevent its reconnection by another person.
- To prevent injuries caused by the fan wheel, a duct at least 2 metres long must always be connected to the fan discharge. The duct must be fastened in such a way that it cannot be removed without tools.
- If the equipment has been out of operation for a prolonged period of time, extra care should be taken when putting it back into operation.


1.2. Operational safety

- The unit is intended for a basic environment:
 - indoor version: ambient temperatures between +5 and + 55 °C with relative humidity up to 60 % (60 % relative humidity up to 20°C).
 - outdoor version: ambient temperatures between -25°C and +55°C, relative humidity is not limited.
 - If the appliance is located elsewhere, its sufficient protection must be ensured. The appliance can only be operated in an environment where there is no risk of fire or an explosion of flammable gases and fumes
- The appliance may be operated within the temperature range of ventilation air between -25°C and +40 °C with relative extraction air humidity up to 80%. The transported air must not contain
 - explosive flammable gases and fumes,
 - organic solvents or aggressive substances that might damage mechanical parts of the unit. If there is a danger of such gases and fumes temporarily entering the duct system (e.g. during floor bonding, or painting), the unit must be switched off sufficiently in advance.
- In the event of a failure the appliance must be disconnected from the power supply as soon as possible!
- The water chiller in all versions must be filled with an antifreeze solution with sufficient thermal resistance, or it must be drained for the period during which outdoor temperature might fall below +5°C. We recommend draining water from the chiller with pressurized air, not using a gravity flow!
- Appliances with hot water heaters
 - Must be permanently connected to the power supply to provide the anti-freeze protection of the hot water heater. In the case of a prolonged power outage, the heating medium must be drained from the hot water heater including the control set. We recommend draining water from the heater with pressurized air, not using a gravity flow!
 - It may only be operated if the heating system including the hot water heater and control set are filled with a heating medium and air bled; also applies to periods outside the heating season! In case the heating system including the hot water heater and control set are not filled with a heating medium, the appliance must be drained of the remaining heating medium, dried properly and disconnected from the power supply.
- The appliance is designed for environments with Class ETA 1 extract air; in environments with extract air Class ETA 2 and ETA 3 it is necessary to comply with conditions specified in chapter 4.2.

2. Storage and transport


- The appliance may only be stored in dry, covered places with ambient temperatures between -25 and 55 °C in such a way that its surfaces that are to be in contact with transported air remain protected against the weather and stay dry and clean.
- Packaging may not be removed until immediately before the installation of the appliance in its operating position. If that is not the case, all parts must be checked for cleanliness before installation and thoroughly cleaned if necessary.
- The appliance must not contain any operational liquids (e.g. water in the hot water heater, water chiller, etc.) during storage and transport.
- The appliance may only be transported on handling blocks (included). During transportation, the appliance must be protected against mechanical damage and water penetration and all openings must be covered with protective covers.
- During transportation, the appliance must be secured against falling. The mode of transport must also eliminate any falls of the appliance or instances of the appliance getting loose.
- Activities near the unit such as grinding, cutting and other ancillary works that could irretrievably damage the surface or individual parts of the unit are prohibited.
- The unit casing is protected by a transparent foil from the production. Remove the foil at an ambient temperature higher than +5°C to avoid the hazard of damaging the metal sheet surface.

Solely permitted methods of handling


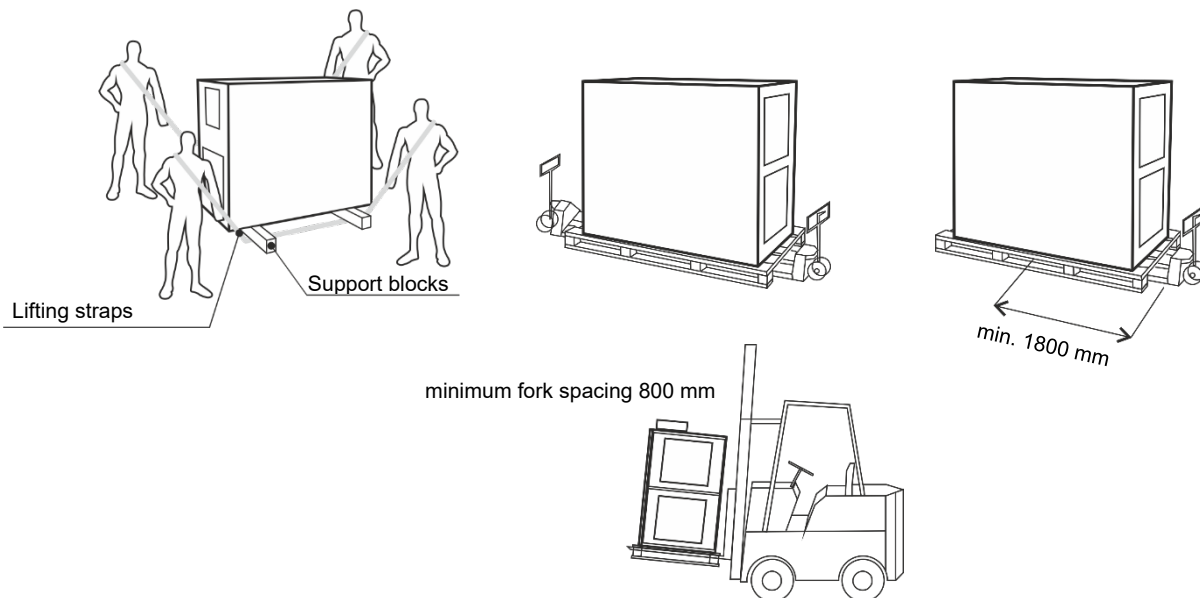


Transport of unit by crane

650 – 3500 DUPLEXbase PS

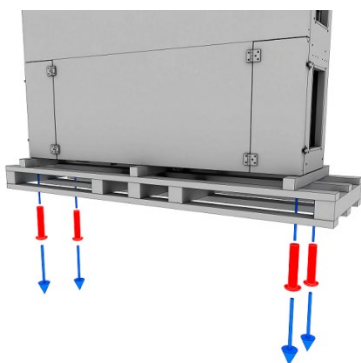

4500 and 6000 DUPLEXbase PS

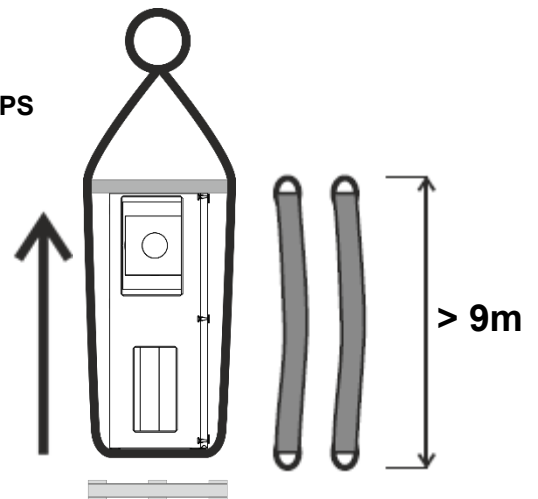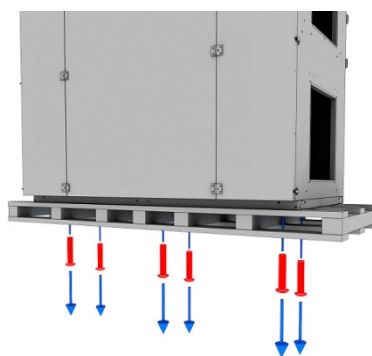

! The bars must be wider than the unit itself.

!

Mount the roof of the unit after placing the unit in the final installation location.


3. Description

3.1. General

DUPLEXbase PS ventilation units with heat recovery are compact appliances containing two independently powered fans with flexibly mounted motors, a highly efficient heat recovery exchanger assembled from thin-walled plastic boards for the recovery of heat/cool, a by-pass damper, slide-out filters and drainage trays, and depending on accessories selected also an external heater, chiller, shut-off dampers, flexible flanges and a control system.

Units can be installed in indoor and outdoor environment. Indoor, DUPLEXbase PS units can be installed as floor-standing (650 DUPLEXbase PS – 6000 DUPLEXbase PS) or ceiling suspended (650 – 3500 DUPLEXbase PS). Outdoor, the units can be installed as floor-standing (650 DUPLEXbase PS – 6000 DUPLEXbase PS).


650 and 1100 DUPLEXbase PS

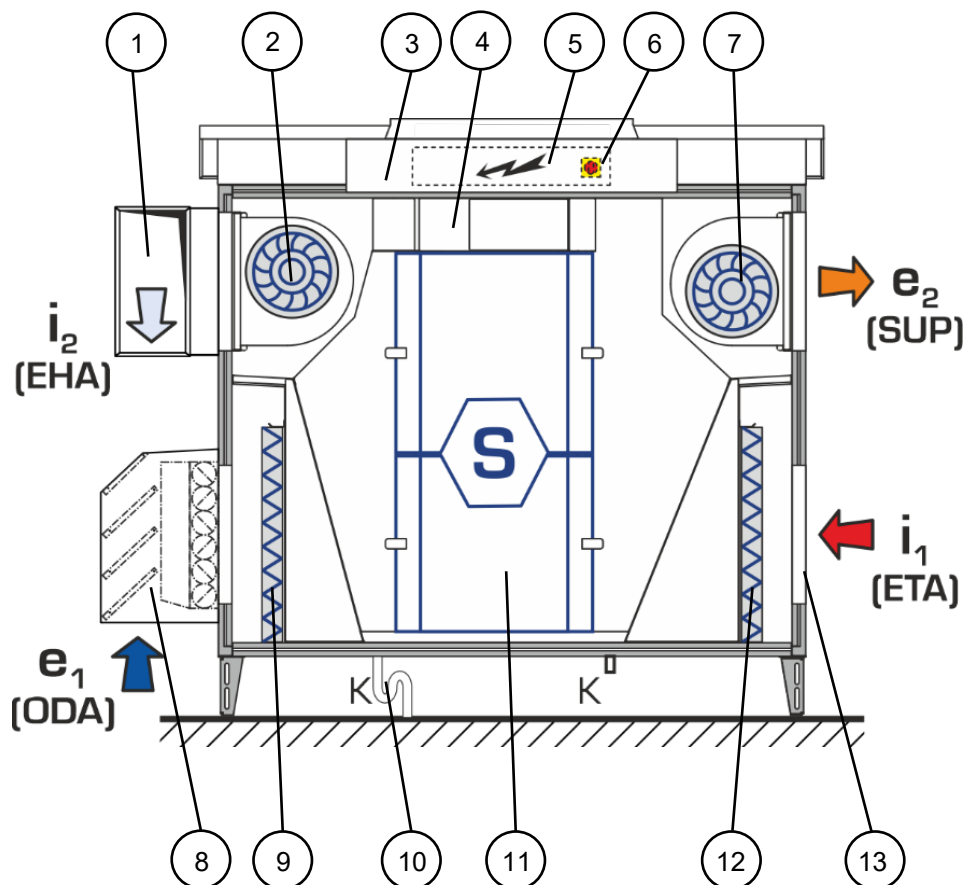

- | | |
|---------------------------------|---|
| 1. Outlet hood *) , exhaust air | 8. Inlet hood with raindrop eliminator *) , outdoor air |
| 2. Exhaust fan | 9. Supply air filter |
| 3. Roof of the unit *) | 10. Condensate drain |
| 4. Bypass of heat recovery core | 11. Heat recovery core |
| 5. Junction box | 12. Extract air filter |
| 6. Main switch | 13. Intake (extract air) |
| 7. Supply fan | |

*) Accessories for outdoor installation

1700 to 6000 DUPLEXbase PS

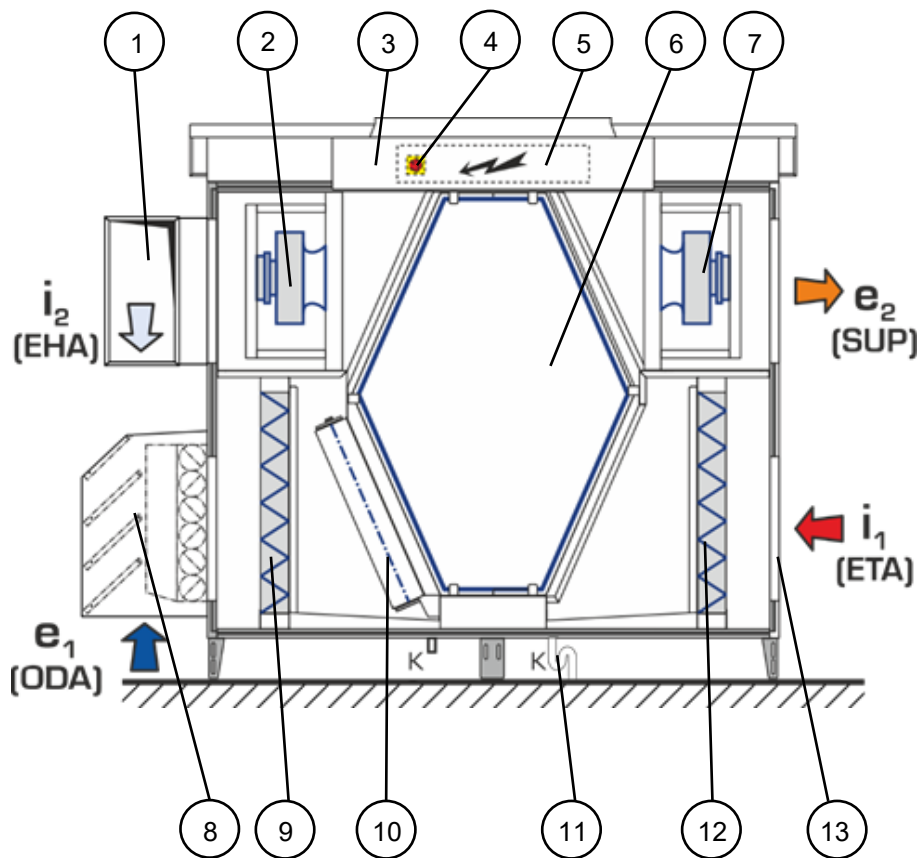

- | | |
|---------------------------------|---|
| 1. Outlet hood *) , exhaust air | 8. Inlet hood with raindrop eliminator *) , outdoor air |
| 2. Exhaust fan | 9. Supply air filter |
| 3. Roof of the unit *) | 10. Bypass flap |
| 4. Main switch | 11. Condensate drain |
| 5. Junction box | 12. Extract air filter |
| 6. Heat recovery core | 13. Intake (extract air) |
| 7. Supply fan | |

*) Accessories for outdoor installation

3.2. Intended use

DUPLEXbase PS ventilation units with heat recovery are intended for the comfort ventilation and possibly hot-air heating and cooling of flats and houses, small plants, workshops, schools, restaurants, cooking facilities and industrial halls with a basic environment. The use of the unit must be in compliance with the Regulation of the Commission (EU) 1253/2014. If the appliance is used for different purposes or it is not operated in compliance with instructions contained in the operation and maintenance manual, the manufacturer is not liable for resulting damages.

4. Installation

4.1. Safety instructions

- During installation make sure no damage or deformation is caused to the case of the appliance (e.g. as a result of handling operations).
- After setting the appliance in place check it for stability and secure it in this position against moving.
- During handling and installation observe all rules of safe work (including work at heights and work with suspended loads) and use appropriate work and safety equipment.
- Lifting and binding equipment may only be operated by trained personnel.


4.2. Hygienic instructions and requirements

- If installation is interrupted or heavy dusting occurs, cover all openings of the appliance in such a way so as to ensure that surfaces to be in contact with transported air remain protected against the weather and stay clean and dry.
- If long-term high relative humidity (short-term more than 90 % or more than 80 % for three consecutive days) is likely to occur with the subsequent moistening of filters (e.g. in areas with frequent fogs, frequent and long rains, flying snow etc.), suitable measures must be taken to prevent microbiologic growth. Recommended measures include more frequent hygienic checks as per VDI 6022 or shorter filter replacement intervals. Another option is the preheating of air using an appropriate control device (electrical duct heaters are an available accessory), or the appliance must be put out of operation for the period when filters are at risk of moistening (if the type of operation allows this).
- Should such weather conditions occur at the site of installation that would cause the dew point to be exceeded in the supply air region of the heat recovery exchanger, or an independent cooling system is installed in ventilated rooms, DUPLEXbase PS units may only be used provided that it has been arranged via appropriate measures that the dew point will not be exceeded in the heat recovery exchanger. The typical weather of central Europe makes this condition almost impossible.
- The e1/ODA air supply chamber has no water drain. An accessible and cleanable chamber with a drain of precipitated water must be installed upstream of the outdoor air inlet into the appliance.
- The HVAC network of appliances operated in an environment with Class ETA 2 extract air must be arranged for operation in such a way so that positive pressure is on the supply air side of the heat recovery unit; in an environment with Class ETA 3 extract air must be arranged for operation in such a way so that positive pressure is on the supply side against the exhaust side. This must be ensured under all operating conditions of the system. For details see EN 13779.
- ⇒ In compliance with hygienic standard VDI 6022 HVAC systems must be equipped with shut-off dampers to ensure the automatic closure of the system so that no air can flow freely through the system. A damper shutting off the supply of outdoor air (ODA) must be thermally insulated. Using shut-off dampers available as an accessory is recommended. Compliance with this requirement is the responsibility of the planner/specialist installation firm.
- ⇒ DUPLEX series appliances have a single-stage filtration system. Appliances in a hygienic version in compliance with hygienic standard VDI 6022 must have at least Class ISO ePM1 50% (F7) filter fitted on the inlet (applies to outdoor air e1/ODA Class ODA 1 and ODA 2). When outdoor air is Class 3, a Class ISO ePM10 50% (M5) filter must be fitted in the duct upstream the outdoor air inlet into the HVAC unit; alternatively, a Class ISO ePM10 50% (M5) filter may be installed in the HVAC unit and a Class ISO ePM1 50% (F7) filter in the duct at the e2/SUP outlet from the unit. Note: air filters ISO ePM1 55% (F7) and ISO ePM10 50% (M5) are separately supplied accessories.
- ⇒ Appliances in a hygienic version in compliance with hygienic standard VDI 6022 may be operated only if the use of recirculating air is suitable for hygienic reasons or the arrangement of operation of the HVAC network ensures positive pressure in the supply section of the appliance against the extraction section.

4.3. Configuring orientation of the unit

The versatile design of sizes 650, 1100, 1700, 2300, 3500, 4500 and 6000 allows adjusting the orientation of the appliance; it can be configured which fan will be delivering the supply air and extract air. The orientation of the unit must be configured once the unit is switched ON for the first time.


1. Open the door of the unit. Check the labels on the fans to learn which fan is marked M1 and M2.
2. Connect the control panel CP Touch to the unit. Turn the unit ON. The control panel will report an error by showing a yellow triangle on the top of the display.
3. Click on the symbol of the error. The control panel will display the message *Orientation is not set*.
4. Proceed back to the default screen, and click on the cogwheel in the bottom left corner.
5. Click on the Settings symbol in the top right corner.
6. Enter the service menu password. The password is available to authorized partners.
7. Proceed to parameter 3.2.2 on the control panel. Set up the fan M1 or M2 as M-SUP (supply fan).

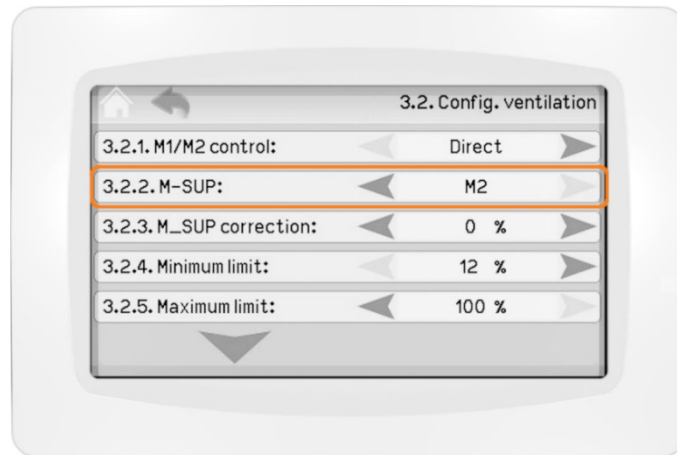

! The operation of the unit is blocked until the parameter M_{SUP} is configured to M1 or M2.

! By default, the unit is equipped with filters of different filtration classes. Make sure the filters are placed correctly according to the orientation of the unit. For more information see Chapter 4.10.


DUPLEXbase PS 650 and 1100

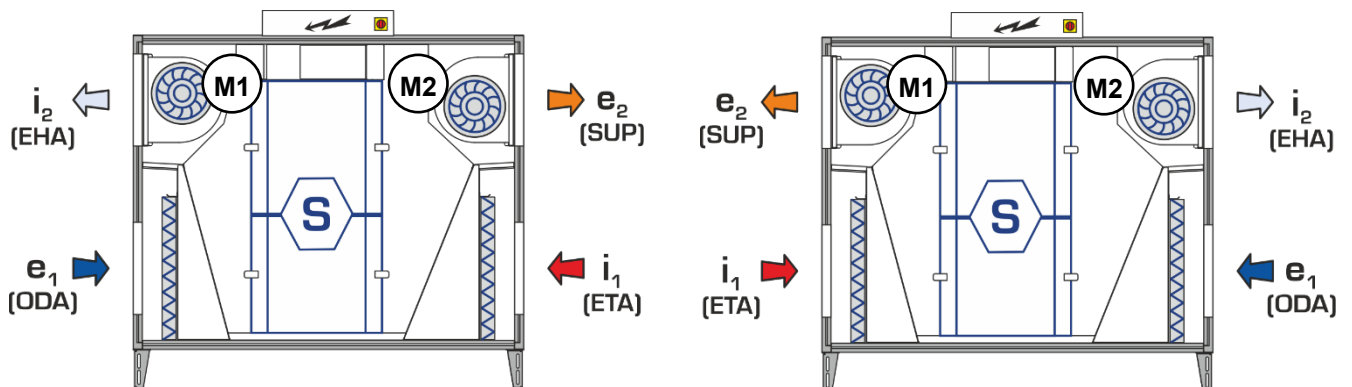

Unit 650 or 1100 Flexi, fan M2 is configured as supply fan (M-SUP).

Unit 650 or 1100 Flexi, fan M1 is configured as supply fan (M-SUP).

DUPLEXbase PS 1700 - 6000

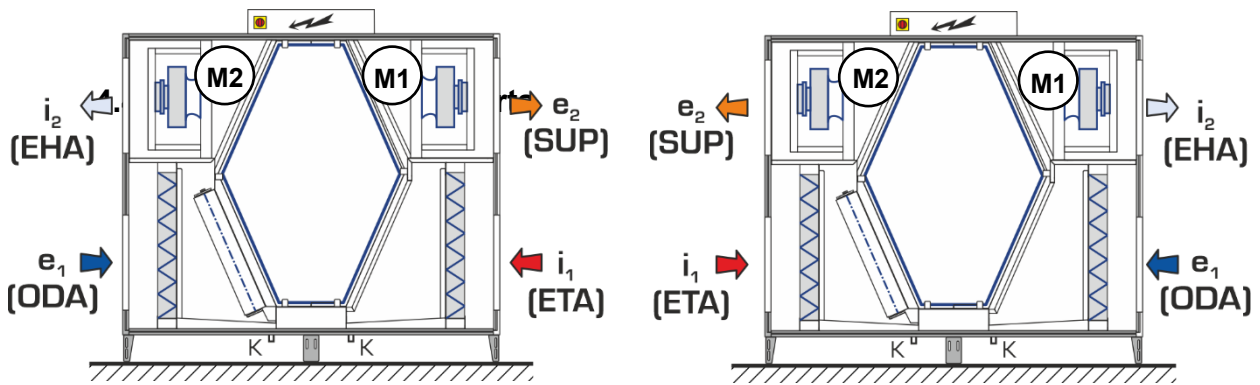


Units 1700-6000 Flexi, fan M1 is configured as supply fan (M-SUP).

Units 1700-6000 Flexi, fan M2 is configured as supply fan (M-SUP).

Identify and label individual ports using the pictures below (labels are included). Begin by identifying port e1 (ODA) - outdoor air inlet; continue toward the fan on the same (shorter) side of the unit with exhaust air outlet port i2 (EHA); next is the port with fan on the opposite side of the unit - supply air outlet e2 (SUP); the last (remaining) port is extract air inlet port i1 (ETA).

Note: Depending on a specific location of the unit proceed clockwise or anticlockwise.

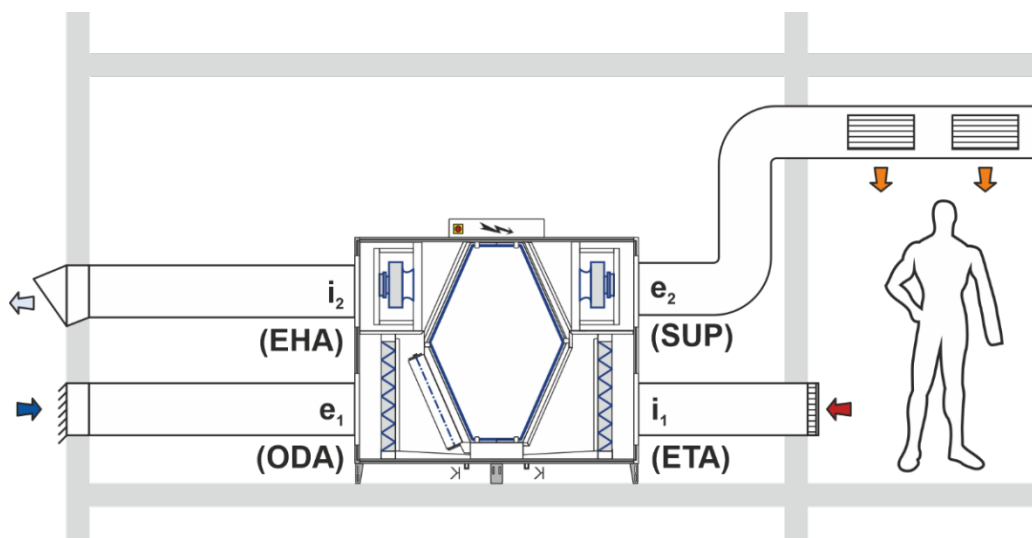

4.5. Connecting the HVAC duct

- Connect the HVAC duct following the design documentation.
- A straight duct being at least 1 meter long must be connected to both outlet ports. This will ensure that an equal air speed profile is achieved throughout the whole port's cross-section area and unit achieves performance levels stated by the manufacturer.
- The duct connected to inlet ports must be arranged in a way allowing a uniform flow rate in the entire cross section of inlet ports.
- To prevent injuries caused by the fan wheel, an HVAC duct at least 2 metres long must always be connected to the outlet of supply air e2 (SUP) and outlet of stale air i2 (EHA). The duct must be fastened in such a way that it cannot be removed without tools.

Outdoor installation of DUPLEXbase PS



- If there is a risk of short-circuit between the exhaust of stale air i2 (EHA) and intake of fresh air e1 (ODA) a duct being at least 3 m long must be connected to the outlet port i2 (EHA). As an alternative, hoods at e1 (ODA) and i2 (EHA) ports can be used; these are provided as optional accessories.

4.6. Installation



- Before installation remove the wooden transport planks.
- The versatile design of DUPLEXbase PS allows both indoor (floor-standing, ceiling-suspended) and outdoor installation (floor-standing), see Chapter 3.1 for more information.
- Fit the appliance in such a way that the prescribed handling spaces are observed:

4.6.1. Manipulation space



Floor standing position

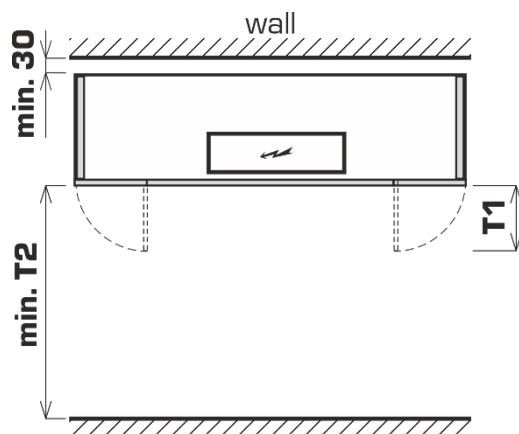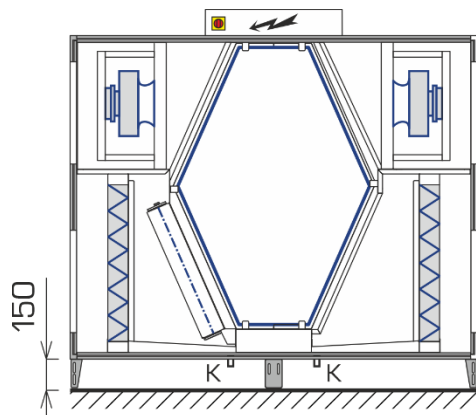

Outdoor installation

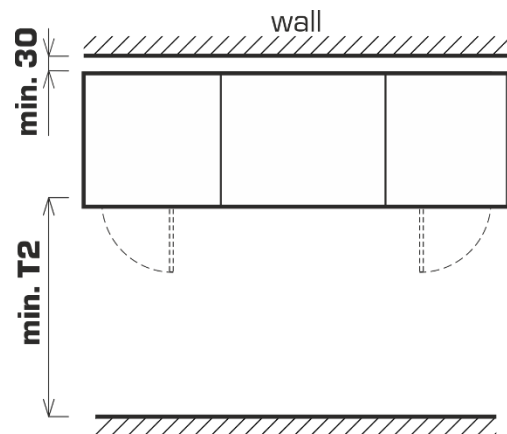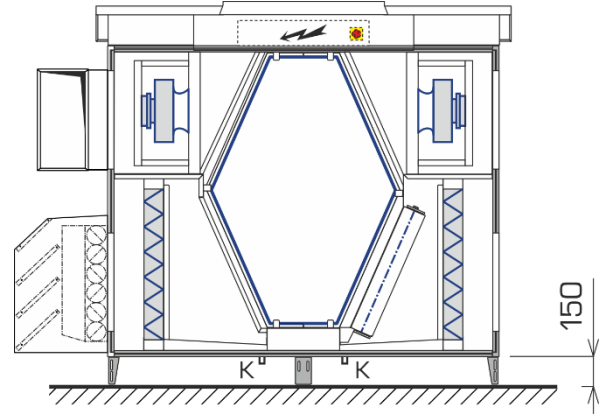

Ceiling-suspended position

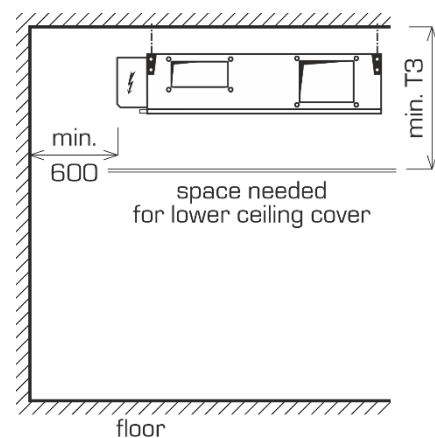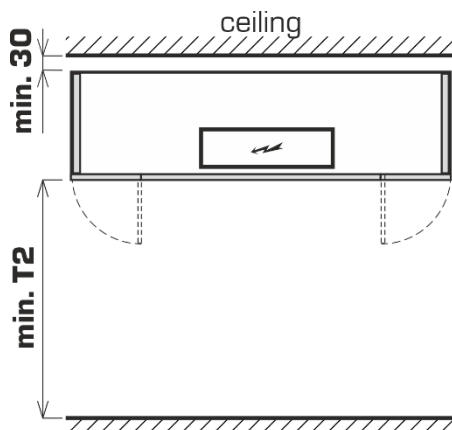


DUPLEXbase PS	650	1100	1700	2300	3500	4500	6000
T1 filter replacement (mm)	320	320	500	500	500	500	500
T2 service access (mm)	300	500	500	600	800	1000	1300
T3 minimum space, lower ceiling cover (mm)	375	480	560	685	880	1090	1395


4.6.2. Inclination of the unit

Floor standing position and outdoor installation

- The appliance is placed on height-adjustable feet included in delivery (4 pieces in sizes 650 and 1100, 6 pcs in sizes 1700 to 6000). Use the adjustable bases of the feet to level uneven ground.
- To achieve correct condensate drainage slope the appliance as follows:
 - 650 and 1100 DUPLEXbase PS:** Slope the longer side of the casing 3% towards the condensate drain located at i_2 (EHA). Level the shorter side of the casing horizontally.

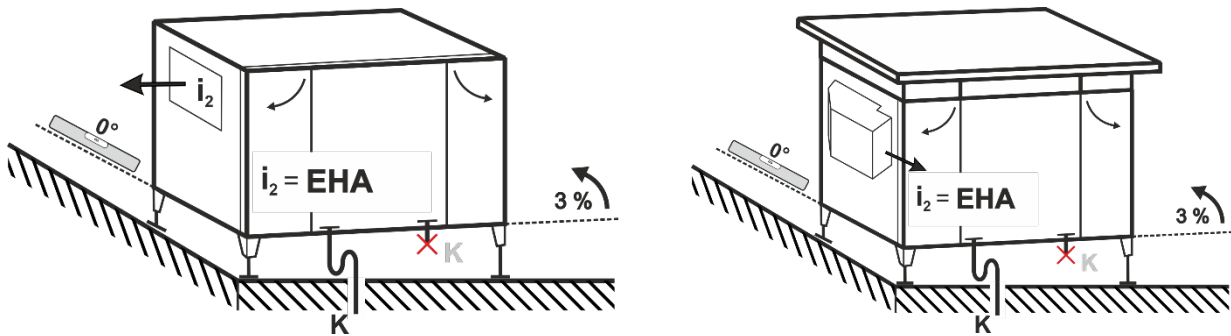


- 1700 – 6000 DUPLEXbase PS:** Level both the longer and shorter side of the casing horizontally

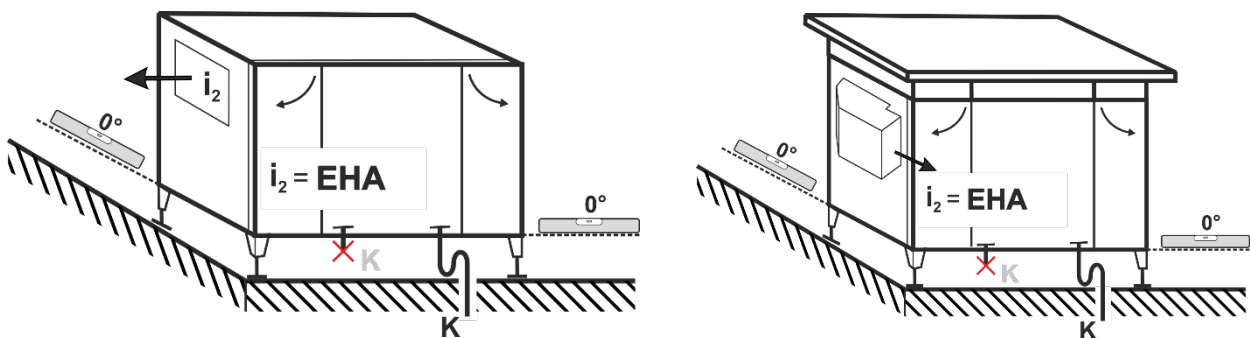


- Adjustable bases of stand feet must remain fully screwed into the feet while manipulating with the unit. Adjust the height of the stand feet after putting the unit into its final installation position only. Failing to do so may cause irreversible damage to the stand feet.

- The unit must be secured against movement.

Floor-standing installation

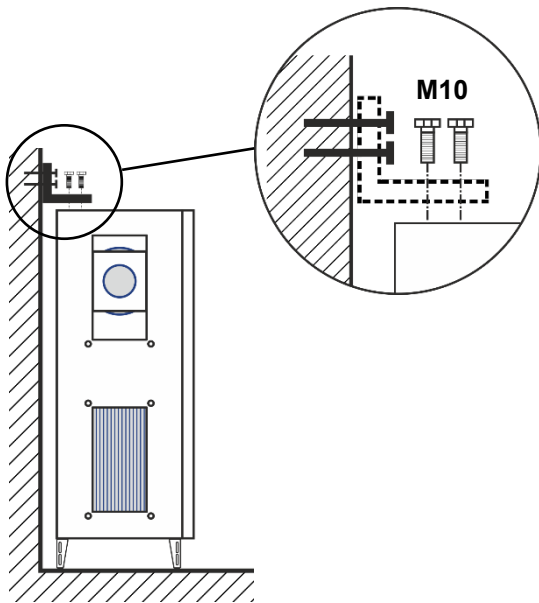


Outdoor installation

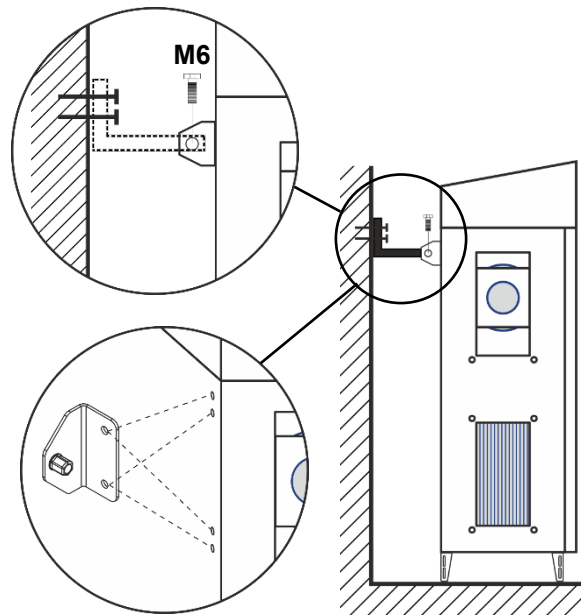


Ceiling-suspended position:

- Ceiling-suspended position is available for 650 – 3500 DUPLEXbase PS.
- The appliance is suspended from anchors of sufficient load bearing capacity (provided by the building contractor) using four suspension brackets (included in delivery) with \varnothing 11 mm holes.
- To achieve correct condensate drainage the appliance must be sloped towards section i_2 (EHA), see the picture:

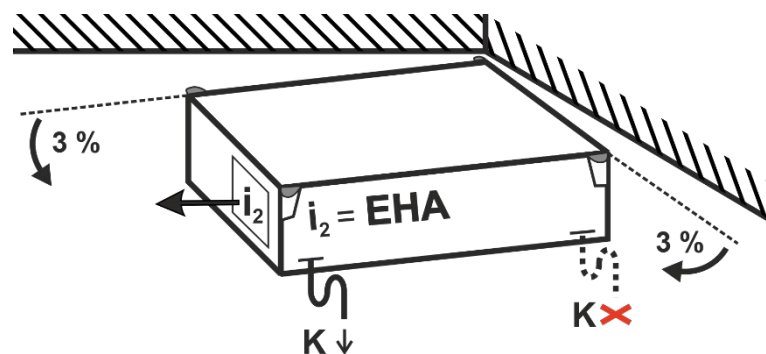

The number and distance of suspension points is detailed in the selection software under **Design > AHU placement method**, as well as in the technical specification that forms an integral part of purchase contract on the ventilation unit.

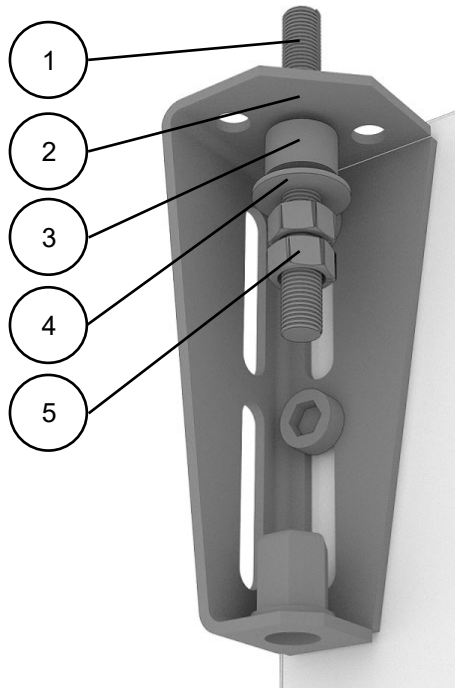

Description:

1. Screw rod M10 *)
2. Suspension bracket
3. Silent block *)
4. Washer M10 *)
5. Nut M10 *)


*) Not included in the delivery

4.7. Connecting the condensate drain pipe


- The unit is versatile and in total has 4 condensate outlets for 2 directions of air flow in 2 installation positions. A single specific condensate outlet is always used for a particular application.
- Seal condensate drains that are not used.

Floor-standing position and outdoor installation


650 – 1100 DUPLEXbase PS: Use the condensate outlet in section e1 (ODA). Keep the condensate drain in section i1 (ETA) sealed.

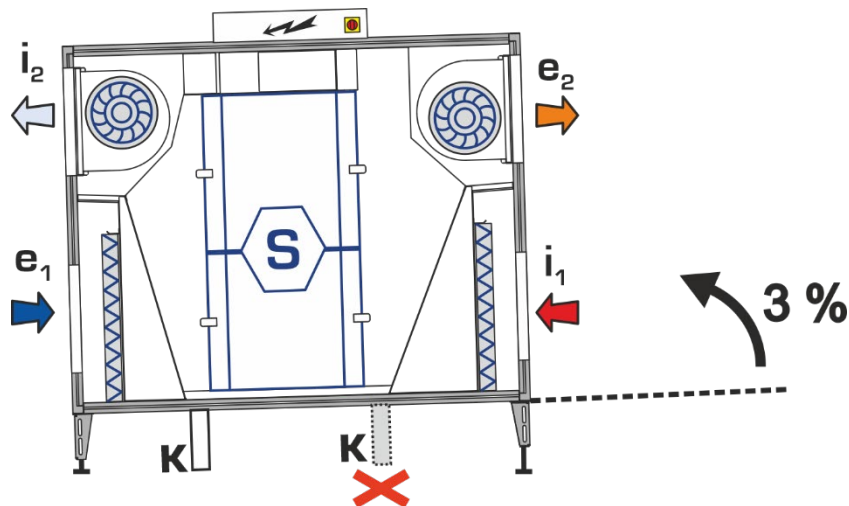

1700 – 6000 DUPLEXbase PS: Use the condensate outlet in section i1 (ETA). Keep the condensate drain in section e1(ODA) sealed.

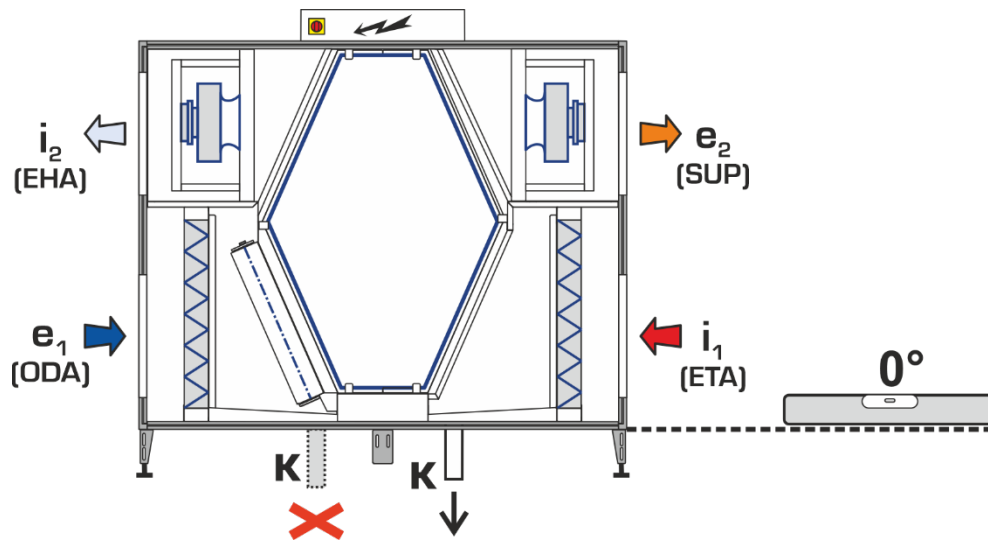

! In outdoor installation use heating of condensate drain that is supplied as optional accessory. See Chapter 11.1 for more information.

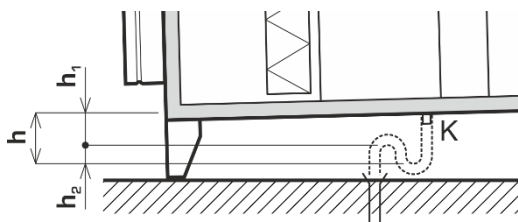

$$h_1 = \frac{\Delta p}{10} + 50 \text{ [mm]}$$


$$h_2 = \frac{\Delta p}{2 \cdot 10} + 50 \text{ [mm]}$$

$$h = 1,5 \frac{\Delta p}{10} + 100 \text{ [mm]}$$

Δp – maximum positive / negative working pressure in the compartment of the unit. The height of condensate drain pipe $h = 15$ cm is sufficient for all installations.

Ceiling-suspended position

- Use the condensate outlet in section i2 (EHA), see picture in the Chapter 11.1.

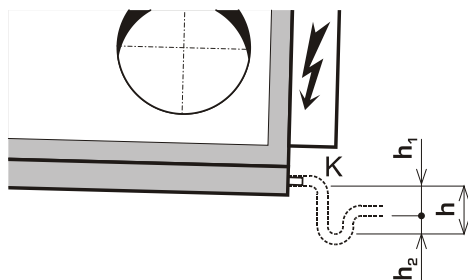

- Connect a pipe or hose (not included; a standard washing machine hose is recommended) to the condensate outlet and shape it into a siphon trap with dimensions as shown in the picture. Appropriately secure the siphon trap shape and connect it to the sewer line.
- Check the entire length of the pipe including the parts inside the unit for free passage and its sloping.
- Prime the condensate drain siphon trap.


i Condensate pump is alternative to water trap. It minimizes the manipulation space needed for condensate drainage. It is available as optional accessory.



4.8. Outdoor installation

To install the DUPLEXbase PS 3 unit in an outdoor environment, use the following accessories. The elements are depicted in Chapter 3.1.

- Unit roof; the following elements are also delivered along with the roof:
 - Square extension to keep the main switch available also when roof is installed;
 - Safety elements to fasten stand feet of the unit to the roof;
 - Element to secure the unit against movement, see Chapter 4.6.2
- Heated condensate drain;
- Droplet eliminator and hood at the port e1 (ODA);
- Hood at the port i2 (EHA).

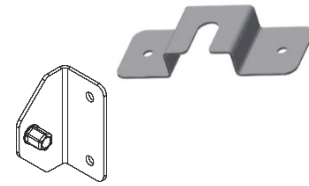


The accessories installation guides will be delivered with the accessories.

i If you use ductwork instead of hoods please follow the rules on duct installation, Chapter 4.5;

4.9. Classification of air filters

- The unit is fitted with filters of different filtration grades - ISO ePM1 55% (F7) and ISO ePM10 50% (M5). The ISO ePM1 55% (F7) grade filter is to be installed in sector e1 (ODA). The filter ISO ePM10 50% (M5) is to be installed in sector i1 (ETA).

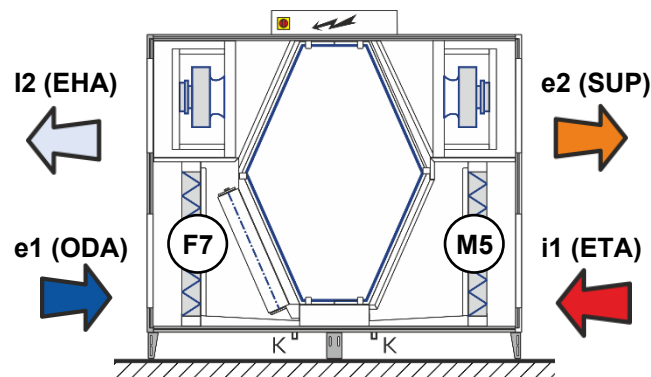

4.10. Installing air filters

- The unit is supplied with separately packaged filter cassettes. Remove and unpack the cassettes and check their condition.
- Install the cassettes in their proper locations on the unit as shown in Chapters 4.4 and 4.9. Follow the pictures in appendix 11.2.
- ➔ **Unpack and install air filters last, immediately before putting the unit into service to avoid contamination.**
- Should any damage or contamination be detected, replace them with new ones. Spare filter cassettes are to be ordered from the supplier. The supplier's address and the spare cassette part number are shown on the identification plate of the unit.
- Insert undamaged clean filters into the guide rails.
- Especially make sure that the arrow showing the direction of air flow through the filter cassette can be seen from the side of the operator (the arrow is by the unit's door) and that it is always pointing towards the heat recovery exchanger!
- The unit is supplied with filter cassette labels unattached. Attach the relevant identification labels near both filters. (e.g. for the door type)
- ! **Unpack and install air filters last, immediately before putting the unit into service to avoid contamination.**
- ! **Use original filter cassettes only! If different cassettes were used, the manufacturer could not guarantee their proper function!**

- Record the date of installing filters appropriately in e.g. the operational logbook.

4.11. Installing, connecting and filling liquid manometers

- Liquid manometers are a separately supplied accessory. Manometers are compulsory for hygienic units in compliance with VDI 6022.
- Manometers are used for measuring the pressure loss of air filters. During installation follow the visual instructions supplied with this optional accessory. After installation level the manometers horizontally.
- Connect the manometers to collection points on the unit's surface using tubes. Connect the tube to the top of the manometer and run it to the metal bushing on the unit's surface (also see a separate manometer installation manual). The tube must always connect two matching connection points identified by symbols "+" and "F+" and "-" and "F-" (cannot be combined). Make sure that tubes from just one filter are connected to the manometer.
- Attach the relevant label near each manometer. Fill out the boxes with the filter grade and record the flow rates and pressure losses of the clean filter (initial pressure loss) and when clogged (final pressure loss) using data from the table below; the values must be adjusted on the basis on actual air flow rates through the unit. The unattached label without information filled out is included.

DUPLEXbase PS 650

Filter type	Flow rate (m ³ /h)	150	300	450	600	700
ISO ePM1 55% (F7)	Initial pressure loss (Pa)	20	42	68	98	119
	Final pressure loss (Pa)	300	300	300	300	300
ISO ePM10 50% (M5)	Initial pressure loss (Pa)	3	10	21	35	47
	Final pressure loss (Pa)	150	150	150	150	150

DUPLEXbase PS 1100

Filter type	Flow rate (m ³ /h)	250	500	750	1000	1100
ISO ePM1 55% (F7)	Initial pressure loss (Pa)	8	32	71	126	153
	Final pressure loss (Pa)	300	300	300	300	300
ISO ePM10 50% (M5)	Initial pressure loss (Pa)	6	16	29	45	52
	Final pressure loss (Pa)	150	150	150	150	150

DUPLEXbase PS 1700

Filter type	Flow rate (m ³ /h)	300	600	900	1200	1500
ISO ePM1 55% (F7)	Initial pressure loss (Pa)	10	25	46	72	103
	Final pressure loss (Pa)	300	300	300	300	300
ISO ePM10 50% (M5)	Initial pressure loss (Pa)	4	9	17	26	38
	Final pressure loss (Pa)	150	150	150	150	150

DUPLEXbase PS 2300

Filter type	Flow rate (m ³ /h)	800	1200	1600	2000	2400
ISO ePM1 55% (F7)	Initial pressure loss (Pa)	16	27	40	56	74
	Final pressure loss (Pa)	300	300	300	300	300
ISO ePM10 50% (M5)	Initial pressure loss (Pa)	9	15	21	27	34
	Final pressure loss (Pa)	150	150	150	150	150

DUPLEXbase PS 3500

Filter type	Flow rate (m ³ /h)	1500	2000	2500	3000	3500
ISO ePM1 55% (F7)	Initial pressure loss (Pa)	38	58	81	108	138
	Final pressure loss (Pa)	300	300	300	300	300
ISO ePM10 50% (M5)	Initial pressure loss (Pa)	6	11	18	25	34
	Final pressure loss (Pa)	150	150	150	150	150

DUPLEXbase PS 4500

Filter type	Flow rate (m ³ /h)	1000	2000	3000	4000	4500
ISO ePM1 55% (F7)	Initial pressure loss (Pa)	9	25	48	79	98
	Final pressure loss (Pa)	300	300	300	300	300
ISO ePM10 50% (M5)	Initial pressure loss (Pa)	2	6	14	26	32
	Final pressure loss (Pa)	150	150	150	150	150

DUPLEXbase PS 6000

Filter type	Flow rate (m ³ /h)	2000	3000	4000	5000	6000
ISO ePM1 55% (F7)	Initial pressure loss (Pa)	24	42	63	87	115
	Final pressure loss (Pa)	300	300	300	300	300
ISO ePM10 50% (M5)	Initial pressure loss (Pa)	9	16	25	36	49
	Final pressure loss (Pa)	150	150	150	150	150

Note: Values in the tables apply to external static pressure 100 Pa. Different pressure requirements may result in different situations. If needed, the detailed initial and final pressure loss data of the filters are available on request from the supplier of the unit.

- Make sure that the position of the label makes it possible to regularly inspect the values recorded.
- Unscrew the rotating knob as much as possible to set zero on the scale (the bottom knob identified by - +), then screw it back by approximately two full turns to have leeway to make settings in both directions.
- Unscrew the FILL plug (the top knob) and keep filling the machine with measuring liquid (included in delivery) until the liquid is visible near the zero mark on the scale. Use the bottom knob to set the value on the scale precisely to zero. Screw the top filling plug-in.

- ! After installing the manometers do not tilt the machine or the door (if they are installed on the door). Measurement liquid might leak out.

4.12. Installing hot water heating coil

During the mechanical installation of the hot water air heater follow the manual supplied with this optional accessory.

The supply (and top-up) water should fulfil especially the following criteria:


- The water must be limp and colourless.
- The pH value of water must not be lower than 7. If water contains dissolved neutral salts its pH value is to be between 8,5 and 9,5. Soda lye or trisodium phosphate (Na_3PO_4) can be used for alkalisation.
- The content of carbon dioxide in an ion and non-ion form is to be as small as possible.
- The remaining **supply water hardness** should be lower than 7 mmol/l (at $q < 23 \text{ kW/m}^2$) and 5 mmol/l (at $q > 23 \text{ kW/m}^2$). To soften the water, the following chemicals can be used: trisodium phosphate Na_3PO_4 or cation-exchange resin (in case water is harder than 7 mmol/l; circuits with high volume of water; when electrical boilers and radiation boilers are present).
- The amount of **calcium ion** in the water up to 3,5 mmol/l (at $q < 23 \text{ kW/m}^2$) and up to 1,8 mmol/l (at $q > 23 \text{ kW/m}^2$).
- All **CO₂** up to 75 mg/l (at $q < 23 \text{ kW/m}^2$) and 10 mg/l (at $q > 23 \text{ kW/m}^2$).

The following rules must be adhered to during the installation of the heater:

- The maximum permitted temperature of the heating medium is 110 °C and operational positive pressure is up to 1.0 MPa.
- For the proper operation of the control set of the hot water heater the heating system must be fitted with a circulation pump of suitable power that will fully cover its pressure losses. The pump, which is supplied with the control set, is designed solely to cover the pressure losses of the water heater!

- If the unit is not equipped with a shut-off damper on outdoor air inlet e1 (ODA), a tight shut-off damper must be installed in the duct upstream the unit (a type with a servo drive with emergency stop, that is, that automatically shuts in the event of a power outage).
 - The heating system must be equipped with a sludge filter in the inlet into the unit.
- ! A temperature sensor must be installed into the air duct to provide for anti-freeze protection of the hot water heating coil. The sensor is to be installed behind the hot water heating coil in the direction of air flow. Please follow the instructions in the guide enclosed to the temperature sensor.
- ! Electrical installation may be carried out only by a person having the required electrotechnical qualification.


i You will find the wiring diagram in the unit's Technical Specification or in the selection SW, tab Controls > Wiring diagram.

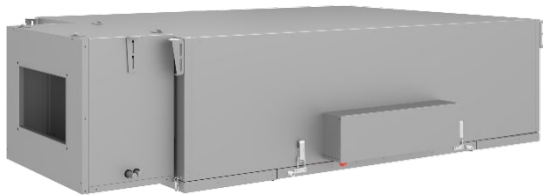

Water heater, ceiling-suspended position



Water heater, floor-standing position

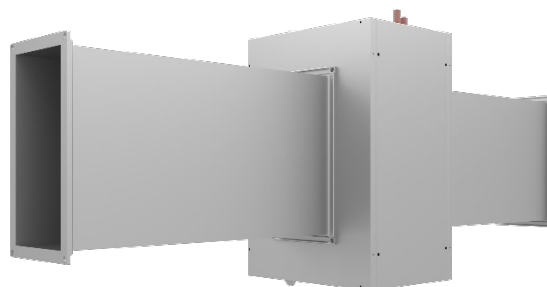

Water heater installed in a duct

i When DUPLEXbase PS is installed indoors, the water heater can be attached to the unit or installed in the supply duct e2 (SUP).

- ! For outdoor installation of DUPLEXbase PS, the water heater can only be installed in the indoor part of the e2 (SUP) air duct.

4.13. Installing mixing valve of hot water air heater

During the mechanical installation and connection of the mixing valve of the hot water air heater follow the manual supplied with this optional accessory.

4.14. Installing shut-off dampers e1 (ODA), i1 (ETA)

During the mechanical installation and connection of the servo drive of shut-off dampers follow the manual supplied with this optional accessory.

4.15. Installing flexible flanges


During the mechanical installation of flexible flanges follow the manual supplied with this optional accessory.

4.16. Installing and connecting the water chiller to the cooling source

- During the mechanical installation of the water chiller follow the manual supplied with this optional accessory.

! For the appliance to work properly and safely it is necessary to correctly connect a condensate drain line.


- Connect a tube or a hose to the condensate drain outlet (not supplied; we recommend using a conventional washing machine hose) and shape it into a trap. Install the trap in the mounting position (see the pictures below), with the trap size according to chapter 4.7. Secure the trap shape suitably and run the condensate drain line into a drain outlet.

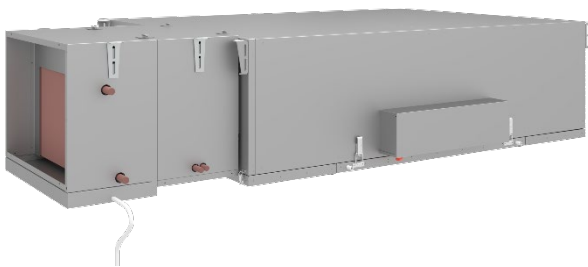

Water chiller, Ceiling-suspended position



Water chiller, floor-standing position

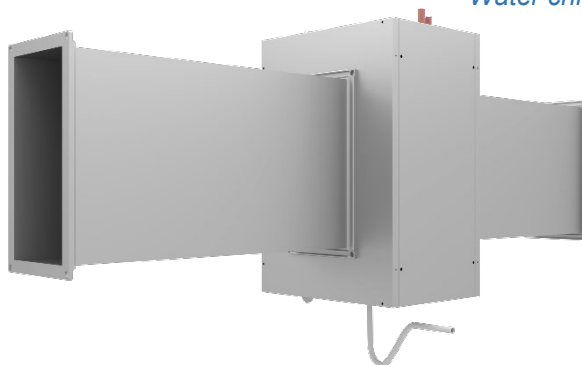

Water chiller installed in a duct

i When DUPLEXbase PS is installed indoors, the water chiller can be attached to the unit or installed in the supply air duct e2 (SUP).

- ! For outdoor installation of DUPLEXbase PS, the water chiller can only be installed in the indoor part of the e2 (SUP) air duct.

The following rules must be adhered to during the installation of the water chiller:


- The water chiller in all versions must be filled with an antifreeze solution with sufficient thermal resistance, or it must be drained as long as the outdoor temperature might drop below 0°C.
- Maximum permitted operating positive pressure is 1.0 MPa!
- The inlet of the chilled water system into the unit must be equipped with a sludge filter.


4.17. Installing the mixing valve of the water chiller

During the mechanical installation and connection of the control manifold of the hot water heater follow the instructions supplied with this optional accessory.

4.18. Installing direct chiller

- During the mechanical installation of the direct chiller follow the manual supplied with this optional accessory.
- During the connection of the direct chiller follow the instructions of the supplier of condensation units and connecting pipes.

 When DUPLEXbase PS is installed indoors, the direct chiller can be attached onto the unit or installed in the supply duct.


 For outdoor installation of DUPLEXbase PS, the direct chiller can only be installed in the indoor part of the e2 (SUP) air duct.

4.19. Installing integrated electrical preheater

- During mechanical installation and electrical connection follow the manual supplied with this optional accessory.
- Electrical connections may only be made by a qualified electrician authorized to service power supply networks.

4.20. Installing external electrical preheater/heater EPO-V

- During mechanical installation and electrical connection follow the manual supplied with this optional accessory.
- Electrical connections may only be made by a qualified electrician authorized to service power supply networks.

 Extra care should be taken regarding the installation conditions of EPO-V heater (indoor environment with a temperature from +5 to +55 °C). For all conditions of installation see the manual included with this optional accessory.

4.21. Installing manometers to control constant flow and constant pressure

During mechanical installation and electrical connection follow the manual supplied with this optional accessory.

5. Electrical connection, commissioning

- The electrical equipment of the unit is designed following standards in effect for electrical connections to power supply network TN-C, TN-S, TN-C,S. The appliance may only be connected by a qualified electrician with valid service certificate issued by Airflow. The appliance is provided with external connections for equipotential bonding.
- The wiring diagram of the equipment is depicted in technical specification that forms an integral part of unit documentation. The wiring diagram is also available in the selection software, tab **Controls > Wiring diagram**.
- Instructions for and the diagrams of electrical connections of optional accessories are included in the documentation sets of these accessories.

- A disconnecting device - a service switch for disconnecting from the power supply – is provided in the power supply line to the equipment.
- Commissioning may vary depending on the type of control system. Commissioning is carried out by a trained technician following the separate documentation set included.
- The controls are described in a separate document.


! The unit is to be protected using a breaker with characteristics "C".

! In case of using additional overcurrent protection against accidental direct or indirect contact, it is necessary to use a **special** circuit breaker designed for frequency inverters and switching sources. It is a protector sensitive to alternating pulsed DC residual currents, resistant to current surges of 5 kA.

6. Access to the unit using the internet

Ventilation units DUPLEXbase PS equipped with control system RD5 ¹ can also be controlled using a web browser. This allows the user to do the following, either from a local network on site or through the Internet:

- Change the user setting of the unit;
- Watch the unit's operational parameters including error messages;
- Browse the unit's operational history;
- Set e-mail notifications with Alarm or Warning messages for up to three e-mail addresses.

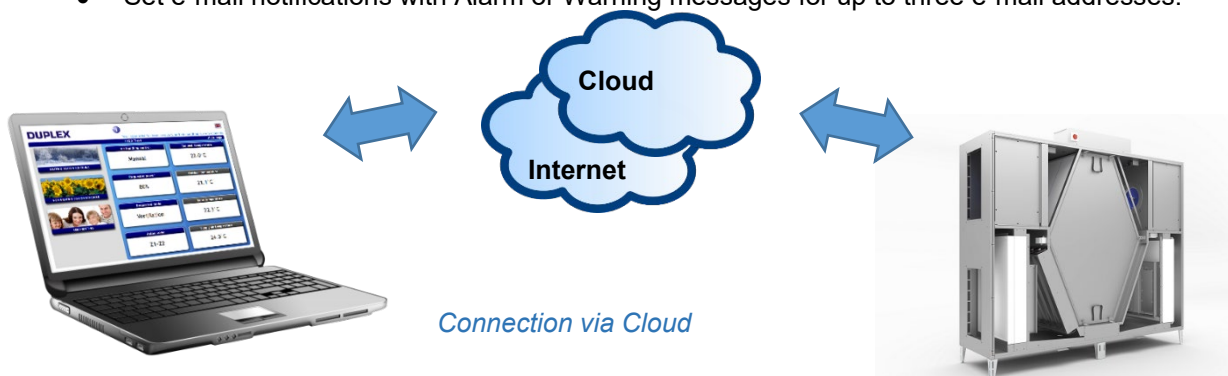

i You will find more information in the Guide on controlling ventilation units equipped with RD5 control system.

7. Hygienic instructions for compliance with VDI 6022

7.1. General instructions

- ⇒ Basic hygiene-related requirements are outlined in the Chapter 4.2.
- ⇒ The appliance has been manufactured in a hygienic design that complies with all requirements of the VDI 6022 standard for the hygiene of HVAC device. In order to meet those requirements during operation it is essential to ensure that the appliance is operated, maintained, inspected and cleaned by sufficiently qualified personnel in accordance with instructions contained in the operation and maintenance manual. It is also essential to ensure for the remaining components of the HVAC system (HVAC distribution systems, distribution elements, ancillary devices, noise silencers, etc.) meet all hygienic requirements of the VDI 6022 standard and be operated in compliance with those requirements.
- ⇒ If long-term high relative humidity (short-term more than 90 % or more than 80 % for three consecutive days) is likely to occur with the subsequent moistening of filters (e.g. in areas with frequent fogs, frequent and long rains, flying snow, etc.), suitable measures must be taken to prevent microbiologic growth. Recommended measures include more frequent hygienic checks as

¹ Information regarding the control module your unit contains is shown on the unit's name plate on the Controls / Specification line. The information is also included in the unit's Technical Specification.

per VDI 6022 or shorter filter replacement intervals. Another option is the preheating of air using an appropriate control device (electrical duct heaters are an available accessory), or the appliance must be put out of operation for the period when filters are at risk of moistening (if the type of operation allows this).

- ⇒ Air duct including accessories with autonomous regulation of operation is to be connected on the fresh air supply. Such duct will, in compliance with the regulation VDI 6022, provide for appropriate treatment of supplied fresh air to prevent air filter from getting wet. In case the duct is not connected or if it does not include such accessory, the appliance is to be put out of operation as long as the risk of air filters getting wet persists (thick fog, snowing).
- ⇒ Operators must be familiar with the tasks and functions as well as the individual components of the appliance.
- ⇒ The appliance must be regularly inspected, cleaned and maintained by sufficiently qualified personnel (see the following chapter).
- ⇒ Regardless of their qualifications, personnel must undergo hygiene training (see the following chapter).
- ⇒ The user must be able at any given time to provide evidence as to the qualifications of operators. If qualified operational and service staff are not available, those activities must be commissioned to a specialist company that will be responsible for the proper operation of the appliance.
- ⇒ The user has an obligation to carry out regular hygiene inspections of the appliance every 3 years (see following chapters).
- ⇒ The appliance may not be operated without air filters. The filter grade of supply fresh air must be at least ISO ePM1 50% (F7). The filter grade of exhaust air must be at least ISO ePM10 50% (M5).
- ⇒ If the appliance has been out of operation for a longer period of time, it must be cleaned thoroughly before recommissioning; if stricter hygienic requirements apply, wiping disinfection must be carried out.
- ⇒ After disinfecting make sure that no toxicologically suspicious or odour-active substances enter supply air!
- ⇒ The user has an obligation to appropriately record the appliance's operation (e.g. in the operational logbook).

7.2. Required qualifications of personnel as per the type of activity

Activities	Operators	Inspection	Maintenance	Repairs
Required personnel qualifications	No special professional qualifications	Professional engineering qualifications in building maintenance, familiarity with measurement procedures for the hygiene inspections of HVAC devices	Professional qualifications in electrical or metal engineering with relevant experience in the field of HVAC (familiarity with equipment design, measurement technologies, equipment control and function)**	
Required hygiene training of personnel	Category B	Category A	Category B	
** simple inspection and maintenance of the equipment (e.g. replacing filter fabric, regular cleaning of equipment etc.) may be carried out by personnel without professional qualifications who received category B hygiene training				

a) Category B hygiene training of personnel

- ⇒ Personnel must demonstrate familiarity with the following areas:
 - (1) Need for and the importance of hygiene during the operation of HVAC equipment
 - (2) Hygiene issues of individual aggregates carrying air through HVAC equipment
 - (3) Maintenance of HVAC equipment, the effects of its size on determining maintenance intervals
 - (4) Simple measurement methods for checking HVAC equipment
 - (5) Actions to be taken in the case of occurrence of substances harmful to the environment and their removal
 - (6) Personal protective measures in the area of hygiene during operation and service activities
 - (7) Key regulations (in particular regulations on accident control) and technical standards

(8) Handling chemical cleaning and disinfecting agents


b) Category A hygiene training of personnel

⇒ Personnel must demonstrate familiarity with the areas of category B training specifications and additionally the following:

- (1) Hygiene basics
- (2) Significance of the various hygienic methods of air treatment
- (3) Physical and chemical measurement methods, hygiene and microbiological inspection methods
- (4) SBS (Sick-Building-Syndrome) issues, symptoms of problems and possible causes
- (5) Technical development and its practical applications
- (6) Hygiene regulations and technical rules for the operation of HVAC equipment

If these instructions are not adhered to, the manufacturer cannot guarantee the permanent maintenance of the unit's hygiene parameters.

8. Package disposal, recycling

Materials marked with the symbol  are recyclable. Put these materials in the respective bins in order to be recycled.

PAP – corrugated cardboard
FOR – wood

PE – polyethylene
PS – polystyrene

PP – polypropylene

Please leave materials marked with the  symbol at the community place used for waste disposal!

Disused ventilation units sold on the EU market can be recycled in compliance with the regulation 2012/19/EU. For further information please contact your distributor.



The guide on disassembling the unit is published at www.airflow.com, in compliance with the Regulation of the Commission (EU) 1253/2014.

9. Repairs, spare parts

All warranty and post-warranty repairs are performed by the supplier or an authorized service company. Service technicians have an updated list of spare parts; you can also contact the supplier of the unit.







10. Warranty

The product is covered by warranty according to general delivery terms and conditions and the warranty conditions of the supplier, which are a part of the accompanying documentation.


The supplier is not liable for damage caused by unprofessional installation and operation that is not in compliance with the operation and maintenance manual and general practices applied during the installation and operation of HVAC equipment and control systems.

11. Visual appendix - manuals

11.1. Connecting the condensate drain line

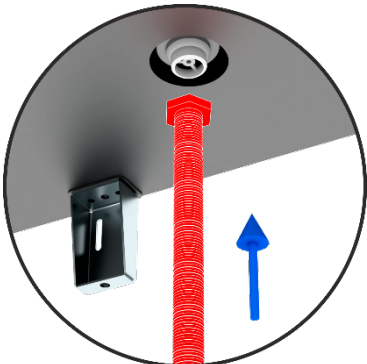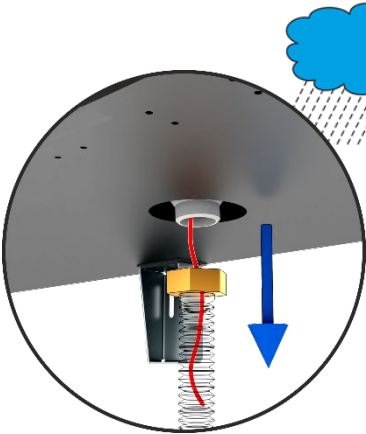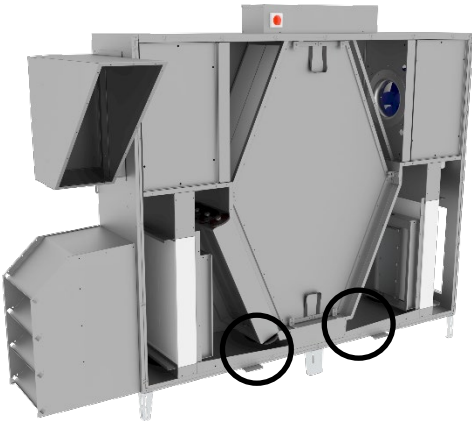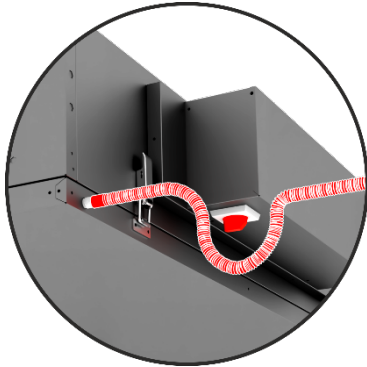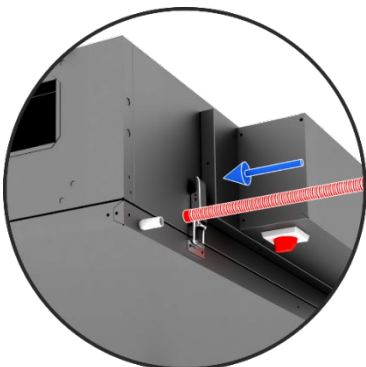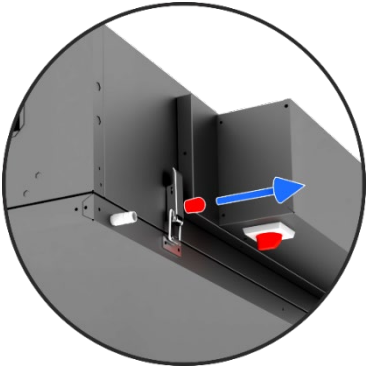

11.2. Fitting the filters

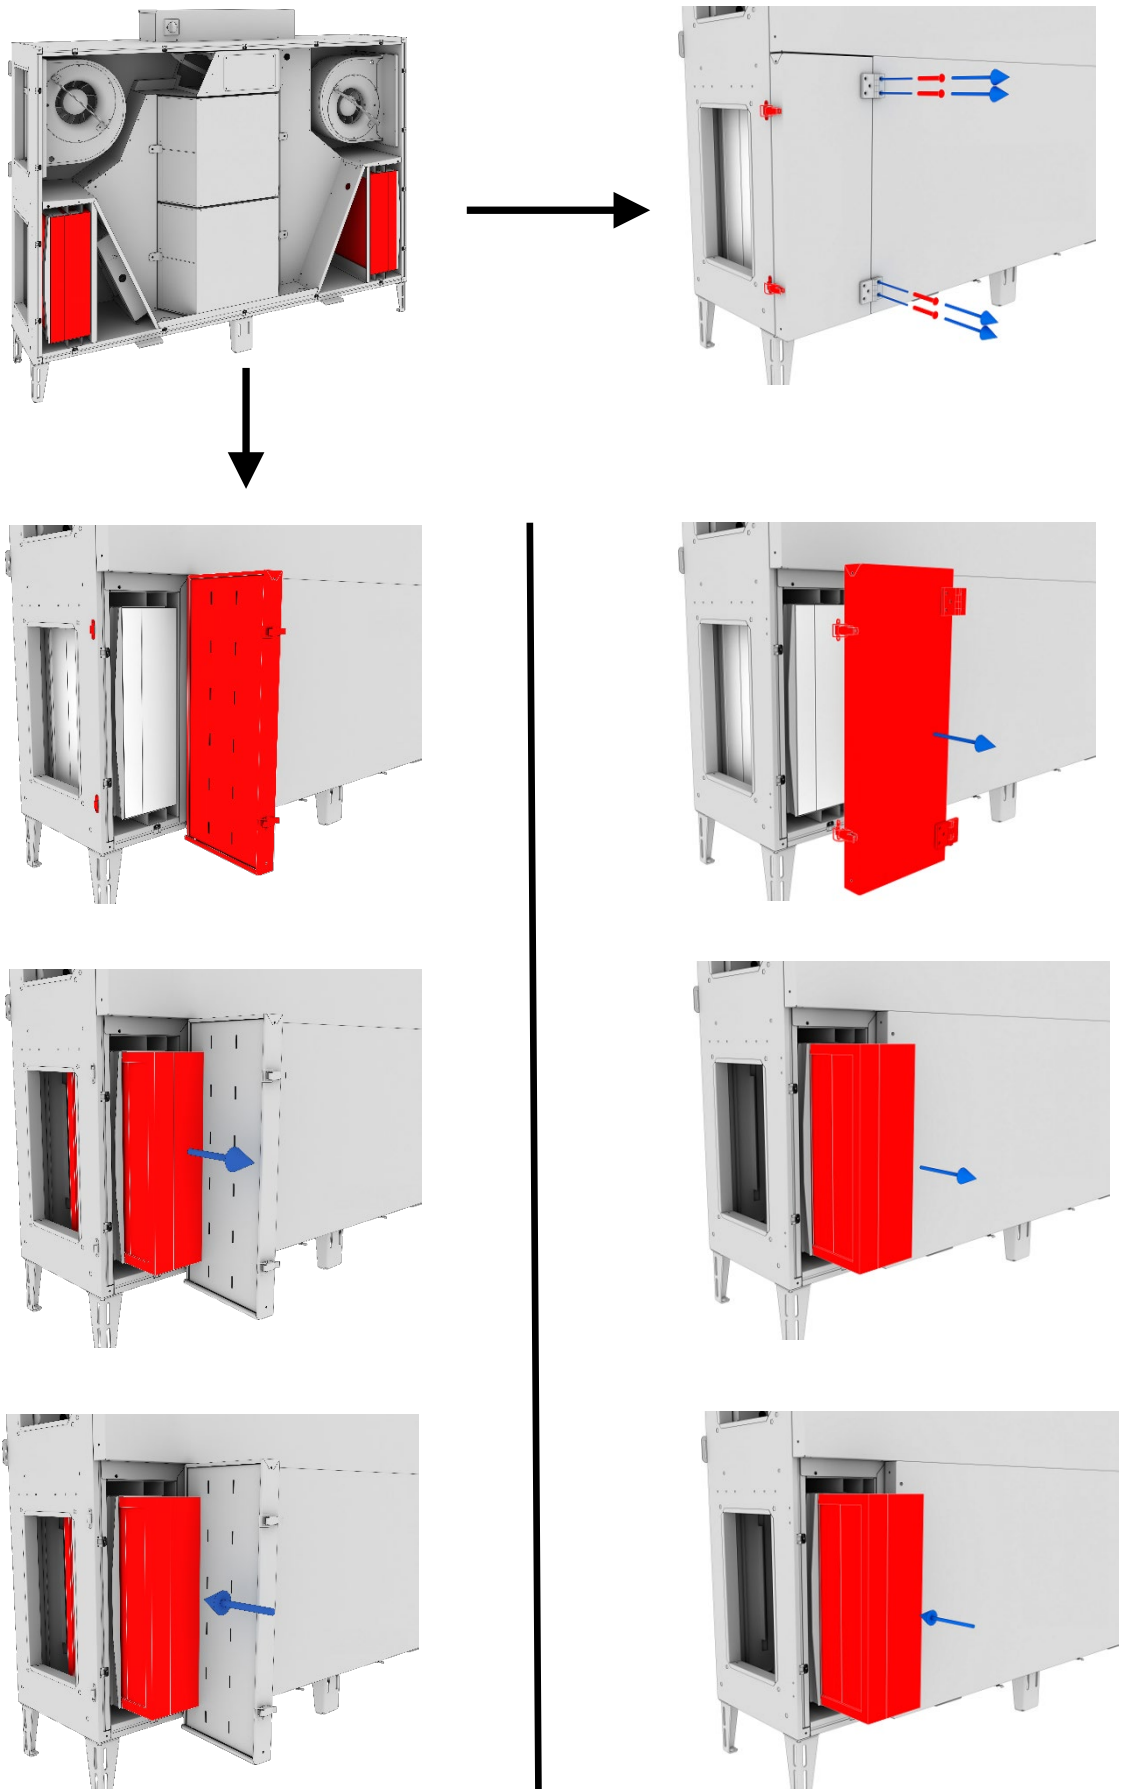



Call: 01494 525252

Visit: airflow.com



Airflow Developments Limited
Aidelle House, Lancaster Road,
Cressex Business Park,
High Wycombe, Buckinghamshire,
United Kingdom, HP12 3QP

E-mail: info@airflow.com
Telephone: +44 (0) 1494 525252

airflow.com

© Airflow Developments Limited, Airflow Developments Limited reserve the right, in the interests of continuous development, to alter specifications without prior notice. All orders are accepted subject to our conditions of sale which are available on request

